

### Roland JX-3P MIDI Implementation Chart

Function		Transmitted	Recognised	Remarks
BASIC CHANNEL	Default: Changed:	1 X	OMNI 1	
MODE	Default: Messages: Altered:	Mode 3 Mode 3 *****	Mode 1 Mode 1, 3 X	Rx cc 125 & 127 Sends cc127 when all keys released
NOTE NUMBER	True Voice:	36-96 *****	0-127 36-96	
VELOCITY	Note ON: Note OFF:	X X	X X	
AFTERTOUCH	Key's: Ch's:	X X	X X	
PITCH BEND		O	O	9 bit resolution To disable, power on whilst holding down tone selector 15.
CONTROL CHANGE	0-63  64  65-119	X  O  X	X  O  X	Hold pedal To disable, power on whilst holding down tone selector 14.
PROGRAM CHANGE	True #:	O *****	O (0-63) A1-D16	To disable, power on whilst holding down tone selector 16.
SYSTEM EXCLUSIVE		X	X	
SYSTEM COMMON	Song Pos: Song Sel: Tune:	X X X	X X X	
SYSTEM REAL TIME	Clock: Commands:	X X	X X	
AUX MESSAGES	All Sound Off: Reset Controllers: Local ON/OFF: All Notes OFF: Active Sensing: System Reset:	X X X X X X	X X X X X X	

Mode 1: OMNI ON, POLY  
Mode 3: OMNI OFF, POLY

Mode 2: OMNI ON, MONO  
Mode 4: OMNI OFF, MONO

O: YES  
X: NO