

Kurzweil Midiboard — MIDI Implementation Chart

Function		Transmitted	Recognised	Remarks
BASIC CHANNEL	Default: Changed:	1 1–16	X 1–16	
MODE	Default: Messages: Altered:	Mode 2, 3, 4 Mode 1,2,3,4 *****	Mode 1, 3 X	Can transmit on up 8 channels simultaneously.
NOTE NUMBER	True Voice:	0–127 21–108	X X	
VELOCITY	Note ON: Note OFF:	O O	X X	
AFTERTOUCH	Key's: Ch's:	O O	X X	
PITCH BEND		O	X	
CONTROL CHANGE	0–119	O	X	All controllers assignable. Defaults: Right wheel forward = cc1 Right wheel back = cc2 Button 1 = cc7 Right switch pedal = cc64 Left switch pedal = cc66
PROGRAM CHANGE	True#:	O *****	O 1–99	Selects Setups
SYSTEM EXCLUSIVE		O	O	Memory dump / load; setup edits. Kurzweil ID = 07 H MIDIboard product ID = 4D H
SYSTEM COMMON	Song Pos: Song Sel: Tune:	O O O	X X X	via MIDI lists via MIDI lists
SYSTEM REAL TIME	Clock: Commands:	X O	O O	For arpeggiator sync Tx all, Rx Start only
AUX MESSAGES	All Sound Off: Reset Controllers: Local ON/OFF: All Notes OFF: Active Sensing: System Reset:	O O O O X O	X X X X X X	via MIDI lists via MIDI lists via MIDI lists via MIDI lists

Mode 1: OMNI ON, POLY
Mode 3: OMNI OFF, POLY

Mode 2: OMNI ON, MONO
Mode 4: OMNI OFF, MONO

O: YES
X: NO