

Doepfer Pocket Controller — MIDI Implementation Chart

Function		Transmitted	Recognised	Remarks
BASIC CHANNEL	Default: Changed:	1-16 1-16	1-16 1-16	
MODE	Default: Messages: Altered:	Mode 3 Mode 1,2,3,4 *****	Mode 3 X X	
NOTE NUMBER	True Voice:	0-127 *****	X X	
VELOCITY	Note ON: Note OFF:	O O	X X	
AFTERTOUCH	Key's: Ch's:	O O	X X	
PITCH BEND		O	X	
CONTROL CHANGE		O	X	
PROGRAM CHANGE	True#:	O *****	O 1-128	Prog change on Master channel?
SYSTEM EXCLUSIVE		O	O	Rx Storage of presets Doepfer ID: 00 20 20 H
SYSTEM COMMON	Song Pos: Song Sel: Tune:	O O O	X X X	
SYSTEM REAL TIME	Clock: Commands:	X O	X X	
AUX MESSAGES	All Sound Off: Reset Controllers: Local ON/OFF: All Notes OFF: Active Sensing: System Reset:	O O O O X O	X X X X X X	

Mode 1: OMNI ON, POLY
Mode 3: OMNI OFF, POLY

Mode 2: OMNI ON, MONO
Mode 4: OMNI OFF, MONO

O: YES
X: NO

Chart drawn up by David Davis from Doepfer Pocket Control/Pocket Fader Owners Manual (translated by Andy Horrel 2000).